ESTP 1960

Parts List Page 1 of 2


Revision 7/16/24

Parts Diagram

Safety First!

Use only Genuine Dualco Parts.

Contact Dualco for repair, or rebuilding procedures.

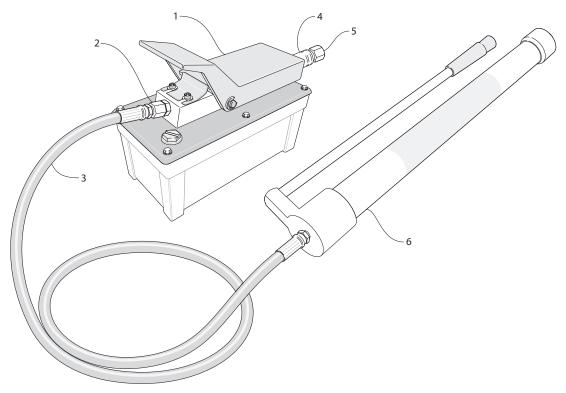

General

Key	Description	Part No.
1	Pump, Air Hydraulic	11134M
2	Reducer	10344
3	Hydraulic Fluid Hose	11037
4	Quick Connect Coupler	11137
5	Quick Connect Plug	11138
6	Body / Grease Barrel Assembly	See Page 2 ►

313) 1/4" NPT(f)










8404 Braniff Houston, Texas 77061 713-644-1164 • FAX 713-644-7761

Parts List Page 2 of 2

Revision 7/16/24

Body / Grease Barrel Assembly

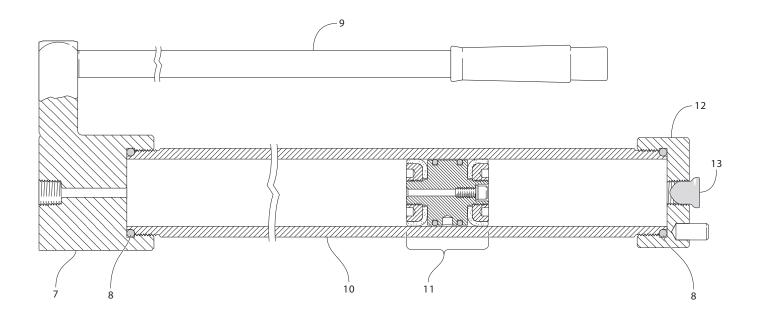

Body / Grease Barrel Assembly

Key	Description	Part No.
7	Body	11132
8	"O" Ring (2 Required)	10811
9	Handle / Piston Return Tool	11141
10	Grease Barrel 20 oz	11136
11	Piston Assembly	10810
12	Grease Barrel Cap	10813
13	Protective Plug (for Grease Barrel Cap)	10568



Pressure ratings must not be exceeded!

All hoses, fittings, and connections must be checked, tightened, and securely fastened on a regular basis. Weak, worn or damaged hoses can rupture - causing human injury and property damage. Always use damage-free components and discard a hose after 3 years of use or before, if any signs of damage have occurred.

• Most DUALCO products are designed for industry use, not for home use.









8404 Braniff Houston, Texas 77061