




Parts List Page 1 of 2

Revision 7/16/24

procedures.

Parts Diagram

Safety First! Use only Genuine Dualco Parts.

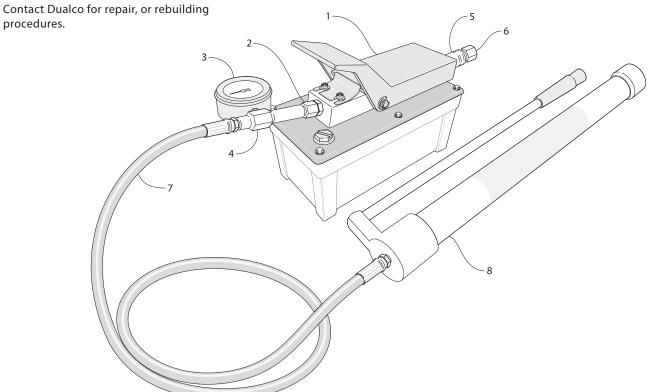

General

Key	Description	Part No.
1	Pump, Air Hydraulic	11134M
2	Reducer	10344
3	Gauge w/ Cover	11475
4	Gauge Tee	10844
5	Quick Connect Coupler	11137
6	Quick Connect Plug	11138

General (continued)

Key	Des	cription	Part No.	
7	Hydı	aulic Fluid Hose	11037	
8	Body	ody / Grease Barrel Assembly See Page 2		
Capacities:		Two "J" size sticks		
		20 oz		
		35 in ³		
Grease Outlet (Cap-10813)			1/4" NPT(f)	














Parts List Page 2 of 2

Revision 7/16/24

Body / Grease Barrel Assembly

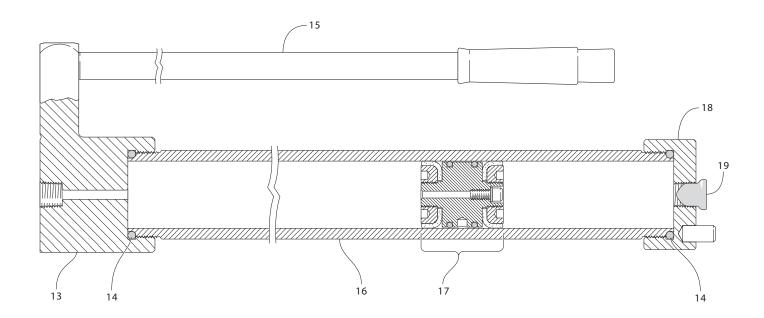

Body / Grease Barrel Assembly

Key	Description	Part No.
13	Body	11132
14	"O" Ring (2 Required)	10811
15	Handle / Piston Return Tool	11141
16	Grease Barrel 20 oz	11136
17	Piston Assembly	10810
18	Grease Barrel Cap	10813
19	Protective Plug (for Grease Barrel Cap)	10568



Pressure ratings must not be exceeded!

All hoses, fittings, and connections must be checked, tightened, and securely fastened on a regular basis. Weak, worn or damaged hoses can rupture - causing human injury and property damage. Always use damage-free components and discard a hose after 3 years of use or before, if any signs of damage have occurred.

• Most DUALCO products are designed for industry use, not for home use.









8404 Braniff Houston, Texas 77061